




CYBERSOLV® C8622

Safe/Effective IPA Alternative Solvent

CYBERSOLV C8622 is a full strength solvent blend specifically designed as an IPA alternative for stencil wiping and manual bench top cleaning applications. Easy to use, C8622 is applied as received in applications where IPA is typically used.

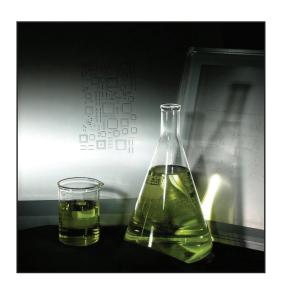

- Safe IPA alternative
- No flash point
- Effective in all IPA applications
- No rinse required
- Extensive compatibility

PRODUCT PROPERTIES	
pH (10g/L)	5.7
FLASH POINT	147°F / 64°C
BOILING POINT	217°F / 103°C
WATER SOLUBLE	Complete
VOC, @ 10%	29.6 g/L

TYPICAL PROCESSES	
APPLICATION	Manual & Stencil Wipe
CONCENTRATION	100%
TEMPERATURE	Ambient
RINSE	None required. If needed, use fresh C8622 or Hot DI Water
DRY	Air

The above process parameters are recommendations based on extensive testing done in KYZEN's application lab. Your KYZEN sales representative can assist you in optimizing your process parameters.

STORAGE AND HANDLING

- Packaged in Polyethylene Containers
- Store at 5-30°C/41-86°F in Original Container
- Standard Chemical Handling Practices
- Shelf Life of 5 Years, in Sealed Containers of 5 gallons/25 Liters or More

AVAILABILITY

- 1 Gallon
- 5 Liters*
- 5 Gallons
- 25 Liters*
- 55 Gallons
- 200 Liters*
- * Liters Available in South Asia and Europe

CYBERSOLV® C8622

Safe/Effective IPA Alternative Solvent





ENVIRONMENTAL, HEALTH AND SAFETY REGULATIONS

CYBERSOLV C8622 is a biodegradable solvent. It contains no CFCs or HAPs. Refer to the Safety Data Sheet for more information.

REACH ✓ KYZEN is an ISO 9001:2015 Certified Company



COMPATIBILITY

CYBERSOLV C8622 is compatible with all materials commonly used in electronic assembly manufacturing and cleaning processes. For specific compatibility information, please contact your KYZEN representative.




FREE CLEANING TRIALS AND PROCESS OPTIMIZATIONS

KYZEN will conduct complimentary trials at your factory or "risk-free" testing in one of our global applications laboratories in North America, Asia or Europe to ensure you achieve your goal. Increase your yields and product reliability by identifying and tuning the critical parameters of your cleaning process. With our commitment to science and understanding process, KYZEN has the flexibility to simulate and refine any cleaning process.

Each laboratory is fully equipped with an extensive array of cleaning and analytical equipment including:

- Batch Washers
- In-Line Washers
- Ultrasonic Systems
- SUI Systems
- Vapor Degreasers
- GC (TCD and FID)
- Scanning Electron Microscope (SEM)
- Ion Chromatography
- FTIR Spectrophotometer
- Humidity Chamber
- High Powered Microscopes

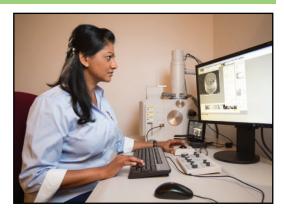



Aqueous, Semi-Aqueous and Vapor Phase Chemistries • Process Evaluation and Optimization
Contract Cleaning • Cleanliness Testing • Soil Analysis

Penang, Malaysia SOUTHEAST ASIAN HEADQUARTERS +60 4 630 3000

Aalter, Belgium EUROPEAN HEADQUARTERS +32 50 395 374

KYZEN.com Nashville, TN

GLOBAL HEADQUARTERS +1 615 831 0888 Manchester, NH
NORTH AMERICAN OPERATIONS FACILITY
+1 603 622 2900

Shanghai, China
CHINA OPERATIONS FACILITY
+86 21 5998 7189

The information contained herein is based on available data from reliable sources and is accurate to the best of KYZEN Corporation's knowledge at the time of this publication. The user is solely responsible for determining the suitability and completeness of such information for their particular application and for adopting appropriate safety precautions. This data is not to be taken as a warranty or representation for which KYZEN assumes legal or financial responsibility. 101917